

Panel_Sheild.txt

Display Switch Panel

Key	1	2	LED7 PS1
GND	3	4	+12 (LED6/7) Power
+5	5	6	LED6 PS2
CONT	7	8	LED3 FLT
RS	9	10	LED1 LFT
R/W	11	12	+5 LED/ SW Pul l Up
E	13	14	LED5 l bk
D0	15	16	LED4 TST
D1	17	18	SW4 Left
D2	19	20	SW3 Down
D3	21	22	SW2 Up
D4	23	24	SW1 Enter
D5	25	26	SW5 Right
D6	27	28	SW6 ESC
D7	29	30	LED2 SYN

Ardui no Mega

+5	1	2	+5
22	3	4	23
24	5	6	25
26	7	8	27
28	9	10	29
30	11	12	31
32	13	14	33
34	15	16	35
36	17	17	37
38	19	20	39
40	21	22	41
42	23	24	43
44	25	26	45
46	27	28	47
48	29	30	49
(MISO)	50	31	51 (MOSI)
(SCK)	52	33	53 (SS)
GND	35	36	GND

Mi rf

VCC	1	2	VCC
ce	3	4	CSN
SCK	5	6	MOSI
MISO	7	8	INT
GND	9	10	GND

Mi rf

1	VCC
2	VCC
3	CE
4	CSN
5	SCK
6	MOSI
7	MISO
8	INT
9	GND
10	GND

LCD

1	Key
2	GND

Panel_Sheild.txt

3 +5V
4 Contrast
5 RS
6 R/W
7 E
8 D0
9 D1
10 D2
11 D3
12 D4
13 D5
14 D6
15 D7

Switch

1 LED7 PS1
2 GND
3 LED6 PS2
4 LED3 FLT
5 LED1 LNK
6 GND
7 LED5 LBK
8 LED4 TST
9 SW4
10 SW3
11 SW2
12 SW1
13 SW5
14 SW6
15 LED2 SYN